
Item No. : ET114(IB)-N Installation guide

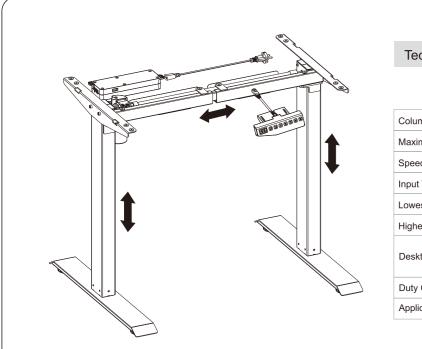

Technical data

Applicable Temperature	0~40°C
Duty Cyde	Continuous operation for 2 mins at most after pause for 18 mins
Desktop Size	1000-1600mm 500-800mm
Highest Position	1210mm
Lowest Position	710mm
Input Voltage	100-240V
Speed	25mm/s
Maximum Load	70KG
Column Number	2

Accessory list

Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.






















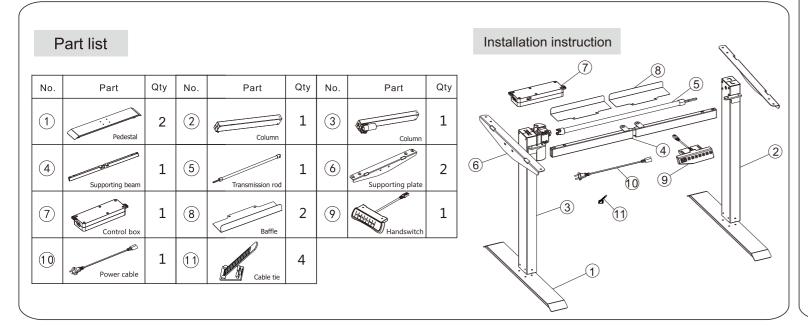


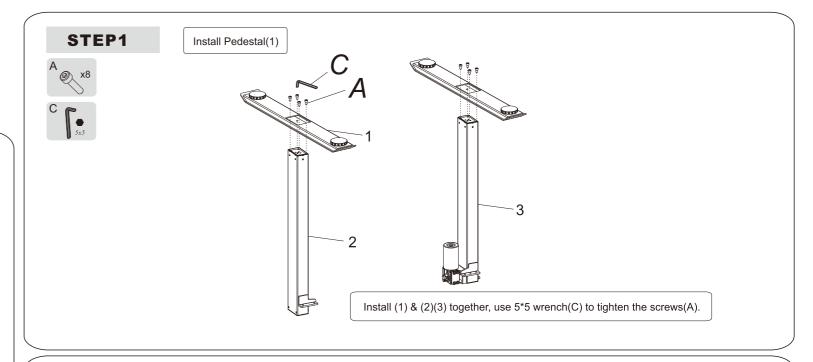


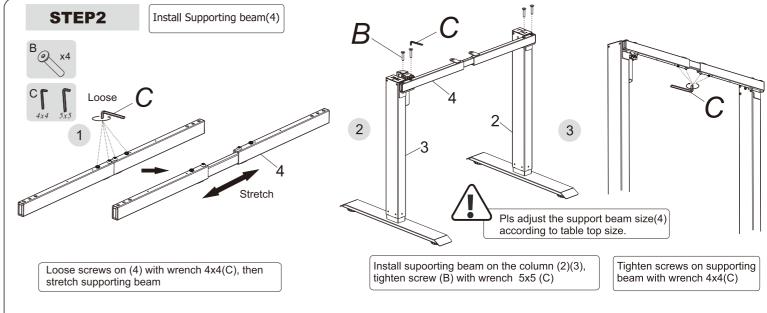


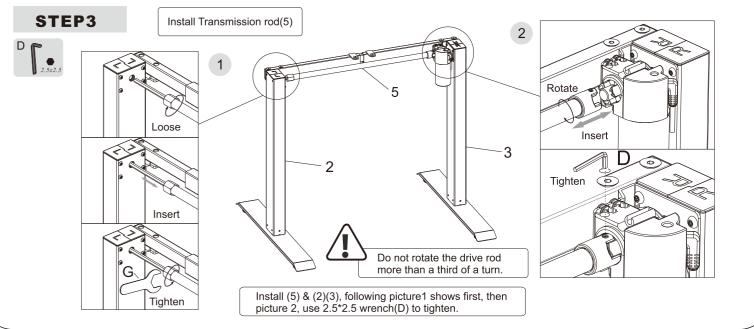

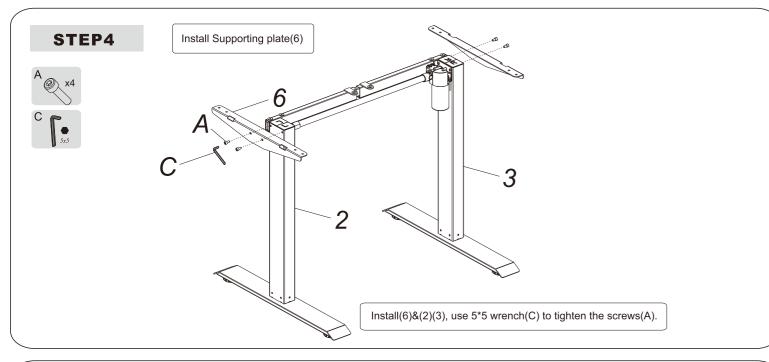

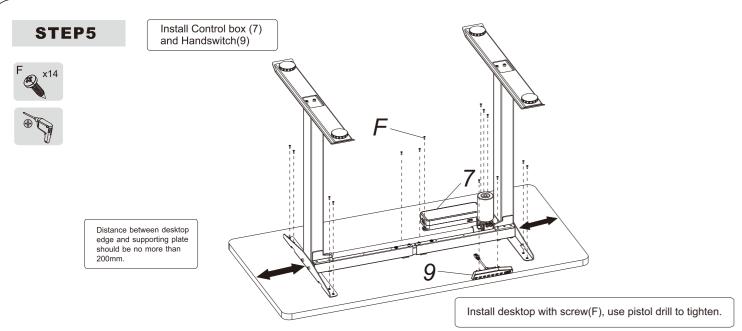

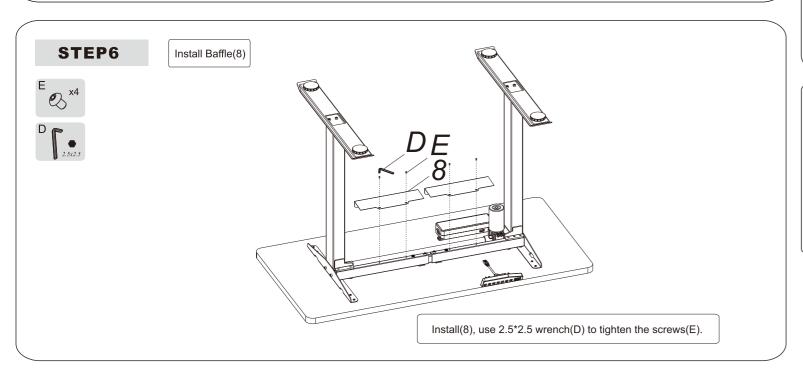

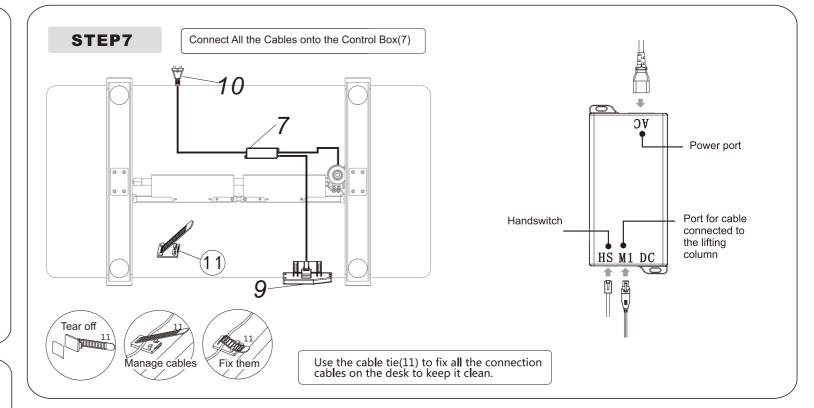

Common fault treatment

The following tips will help you detected and eliminate the common fault and error If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with	1.Check if all the cables be connected well
a power supply	2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after	1.Check if all the cables be connected well
connected with a power supply	2.Contact your supplier or dealer
	Check if overloaded, max loading: 70kg;
Rising in a low speed	Contact your supplier or dealer
The motor not move as instructed	Contact your supplier or dealer
Go down but not go up	1.Reposition
Go down but not go up	2.Contact your supplier or dealer
Downward sliding	Check if overloaded, max loading: 70kg;
Downward sliding	Contact your supplier or dealer
Frequently Reposition	Check if overloaded, max loading: 70kg;
Frequently Reposition	Contact your supplier or dealer
Overwork	Restart after suspend for 18mins while connecting with power;
(Duty cycle: Max 2min on/18min OFF)	Contact your supplier or dealer;
Not enough up&down height	Press "M" and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings
	2.Contact your supplier or dealer



- 1. Power supply: AC100V-240V,50/60HZ
- Service Environment: 0-40°C
 Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when
- cleaning, be careful not to let the drops into the internal parts, not loose the connector.

 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in
- A. The electric box contains electronic components, inetails, phastics, whe set., so dispose on this accordance with each country's environmental legislation, not the general household waste.
 Check carefully to ensure correct and complete assembly before using.
 Be familiar with all functions and program settings of the product before first use.
 Children are forbidden to play on the product because of unforeseen action when playing, so any

- dangerous consequences caused by this improper action will not be on manufacturers.

 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on
- the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner
- used will not pollute the environment. 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given
- supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a
- similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

 14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.